

### **DGH Modbus Exception Codes**

<b><u>Exception</u></b>	<b><u>Name</u></b>	<b><u>Description</u></b>
01	Illegal Function	This exception code is generated when the module does not recognize the function code.
02	Illegal Data Address	This exception code is generated when the module does not support the specified data address in the command.
03	Illegal Data Value	This exception code is generated if the command data is out of range for the function.
06	Slave Busy	This exception code is generated during the 3 seconds after the module is reset or powered up.